

## How to Measure Drapery Panels

### ALL PANELS ARE SOLD AS SINGLE PANELS NOT IN PAIRS.


They come in pre-set widths and are made to length to the 1/2"

#### Width:

- Measure the width of the window area you'd like to cover.
- Take time to plan your installation and get the measurements correct.
- We recommend adding an additional 4" - 6" to each side from the edge of the window glass.
- This allows the drapery panels, when pulled to their sides, to clear the window allowing more natural light in.
- Consider the decorative hardware you'll be using to hang the panels from.
- Finally add another of 6" - 8" (3" - 4" for each finial on both ends of the pole) to the total space of window/wall area you'll need.

#### EXAMPLE OF HOW TO ORDER


- If your window is 75" width, you have the option to select one or two panels.
  - 1) 2 panels of 50" width
  - 2) 1 panel of 100" width
- This depends on how many pleats you want.
- The Getblinds product "Parisian Pleats" is an exception and does not include in this type of window covering measuring, the size of the pleat in this case is the actual width.

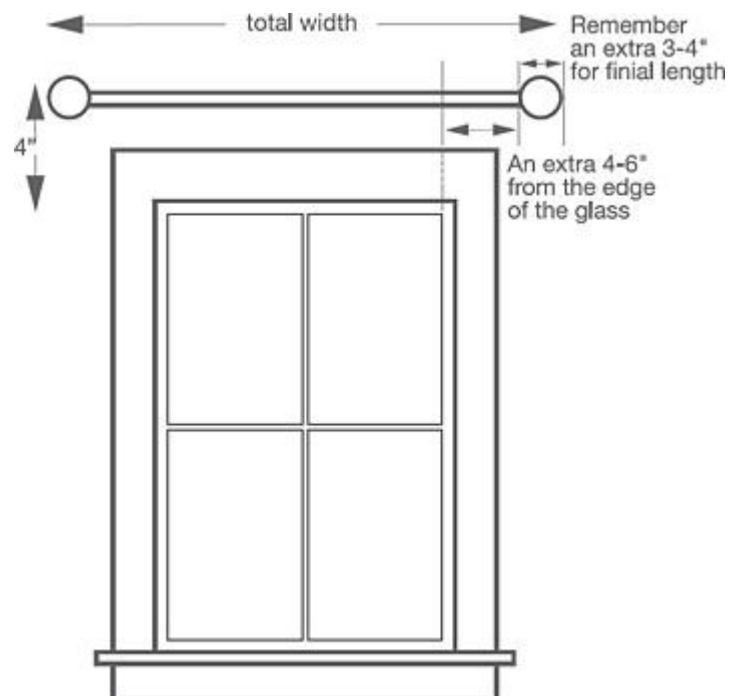

#### Length:

- Finished panel length is measured from the top of drapery panel to the bottom. It includes the rod pocket (either 1 1/2" or 3", but does not include the header), grommets, pleats or tabs (either on back or top of panel).

- The finished panel length you provide to the 1/2" will be the exact measurement the drapery panel will be made to.
- Consider the additional height you will gain when hanging the panels from decorative poles.
- It is recommended to mount the pole approximately 4" above the window frame.
- If the panel is being mounted directly onto a pole through the rod pocket, grommets or tabs, no additional length is added.
- When using clip rings to attach Rod Pocket or Parisian Pleats to a pole, note that clip rings will add approximately 2"- 4" of length. Therefore, subtract that extra length from the final length of the panel to be ordered.
- 1 1/4" Metal rings add 2 3/4" of length
- 1 1/4" and 1 3/8" small Wood rings add 2 1/2" of length
- 1 7/8" and 2" large Wood rings add 3 1/4" of length

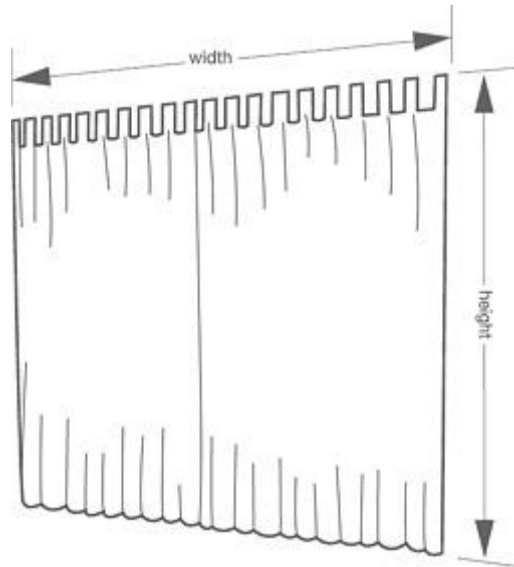

**EXAMPLE:**

- Window height = 84" L
- Mount Hardware 4" above window = 88" L using 1 1/4" bamboo hardware uses Small Wood Rings to attach to panel = - 2 1/2" = 85 1/2" L panel
- 85 1/2" L panel - 1/2" floor clearance = 85" L
- This must be factored into your length measurements.

**Sheer Undertreatment Lengths:**

- It is recommended that when sheers are being used as an under treatment, they be ordered with NO HEADER and shorter in length than the Drapery Panels they will be mounted under. Mount sheer drapery hardware 1" lower than the decorative hardware used for the outer panels and measure down to floor, but about 1/2" shorter than the drapery panel length chosen. This way the sheer's top edge and bottom hem clear the tops and bottoms of the outer drapery panels.

***Drapery Panel Length Advice:***

- *You can specify any length desired to the 1/2"*
- *Floor Length panels should be 1/2" above the floor for easy operation.*
- *Puddle Length panels should have another 6" - 10" of length to pool the fabric on the floor. This length is not recommend for high traffic areas or drapery that needs to be opened and closed often.*

